

# NOVA LUCE


9186001  
9186002 9288080

1




Turn off the general switch

2

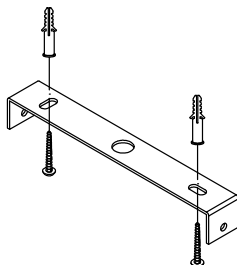


Drill holes & apply plastic anchors  
With screws

3

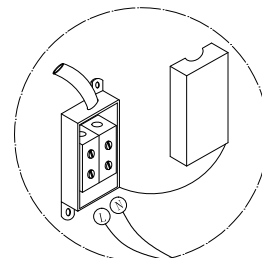


Connect the wires

4

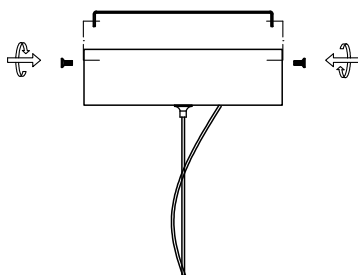

Apply the side screws

5

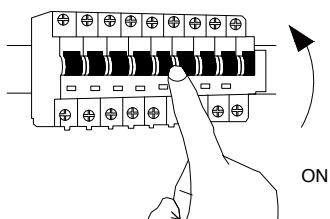

Turn on the general switch

