


# NOVA LUCE


9019770

1

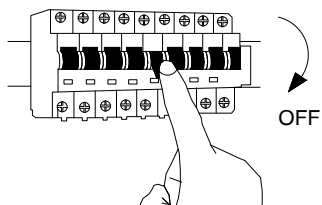


Turn off the general switch

2

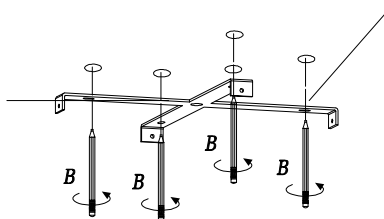


Mark & drill holes

3

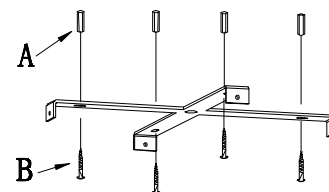


Apply plastic anchors with screws

4

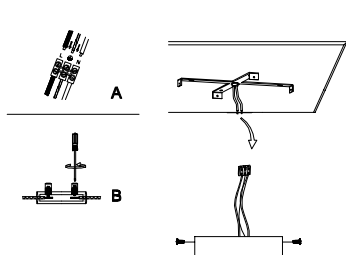


Connect wires

5

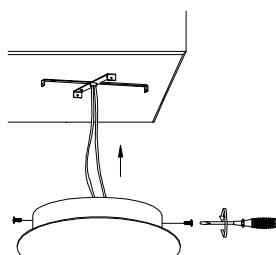

Apply the side screws

6

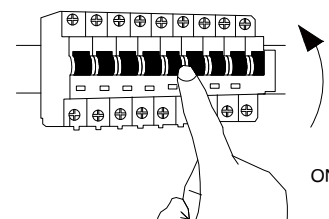

Turn on the general switch

