


NOVA LUCE


9070140

1

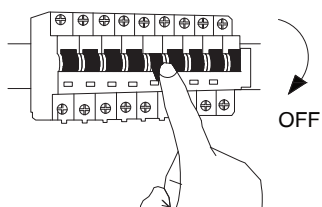


Turn off the general switch

2

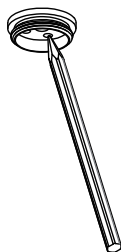


Mark where to drill holes

3

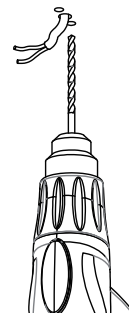

Drill holes

4

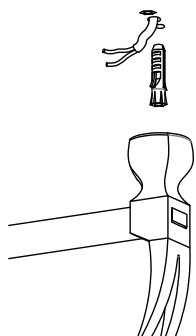


Apply plastic anhors

5




Tie up screws to make it stable

6

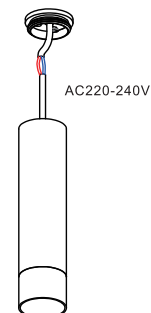


Connect wires

7



Apply the cap by rotate

8

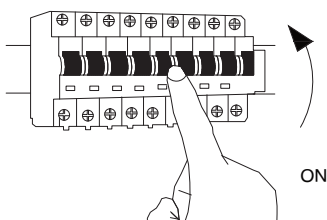

Turn on the general switch

