


NOVA LUCE

9241110

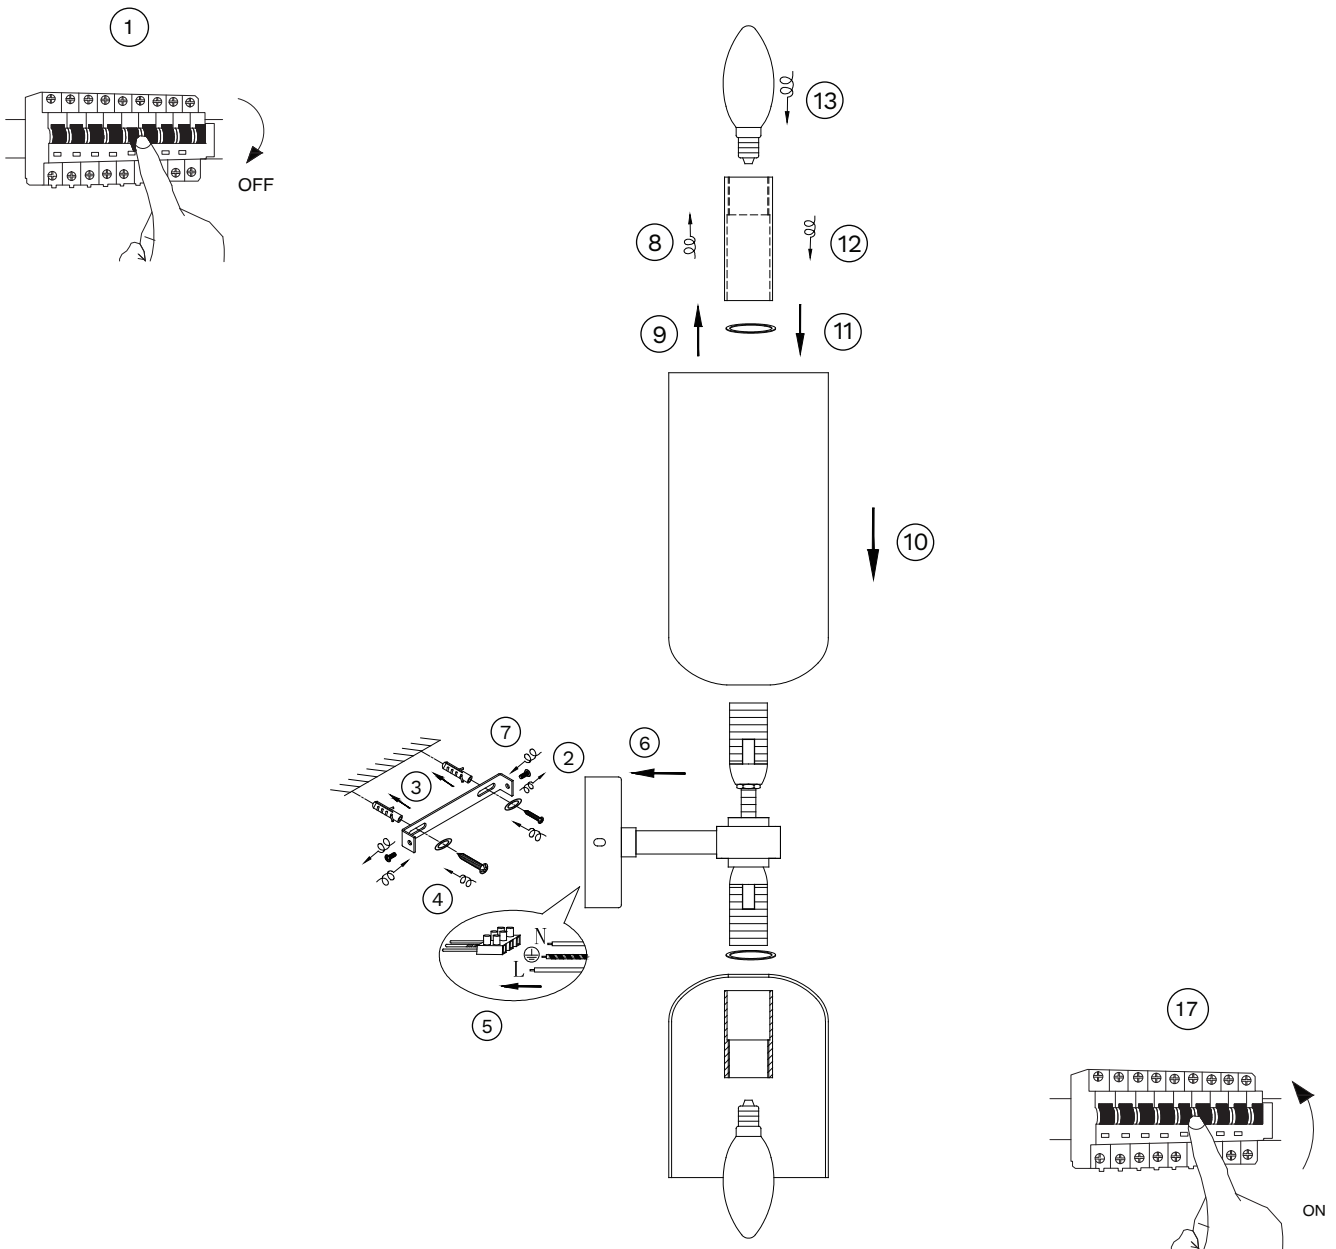

1. Turn off the general switch
2. Untight the side screws
3. Drill holes apply plastic anchors
4. Apply screws
5. Connect wires
6. Put the canopy in place
7. Apply the side screws
8. By rotating untight the socket
9. Remove the plastic ring
10. Put the glass in place
11. Apply the plastic ring
12. Apply the bulb holder
13. Apply the bulb
14. Turn on general switch

