


NOVA LUCE


9019761

1

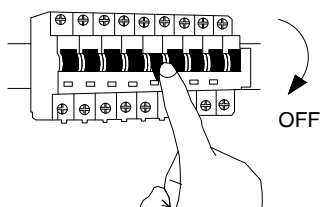


Turn off the general switch

2




Mark & drill holes

3

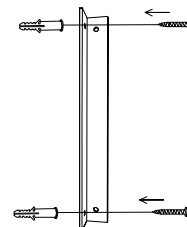


Apply plastic anchors with screws

4

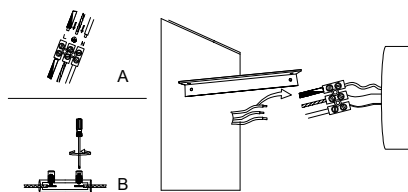


Connect wires

5

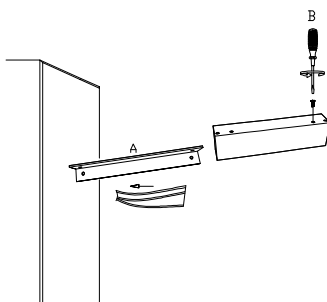


Apply the side screws

6

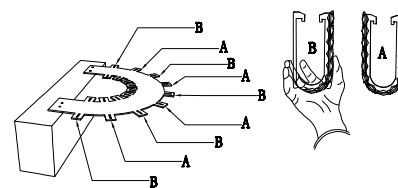

Align the two hooks of the crystal with the holes on the lamp body & fasten the hooks to A & B

7

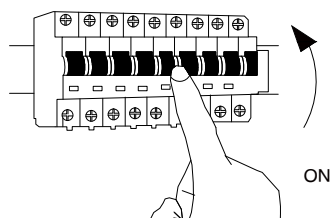

Turn on the general switch

