

# NOVA LUCE


9501237

1




Turn off the general switch

2

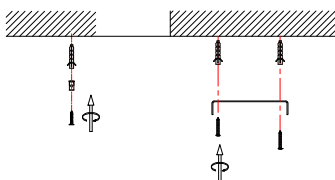


Drill holes apply screws  
& Plastic anchors

3

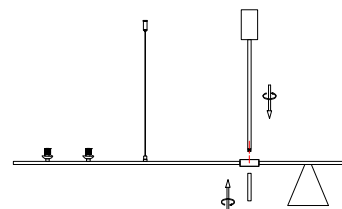


By rotating apply the pipe

4

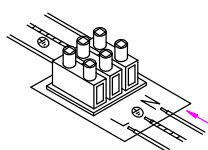


Connect the wires

5

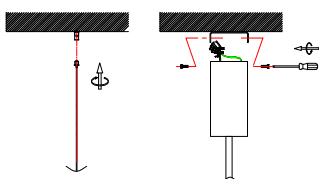


Apply side screws  
& The canopy by rotating

6

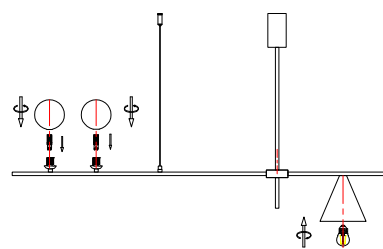

Insert the bulb with the glass

7

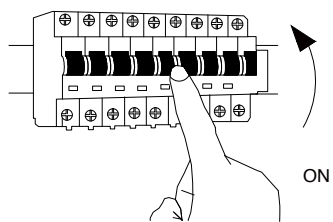

Turn on the general switch

