


# NOVA LUCE


9054451

1

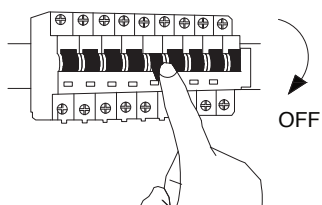


Turn off the general switch

2

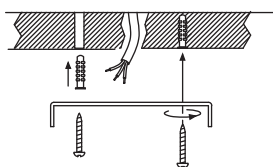


Drill holes apply plastic anchors  
With screws

3

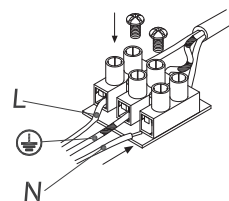


Connect wires

4

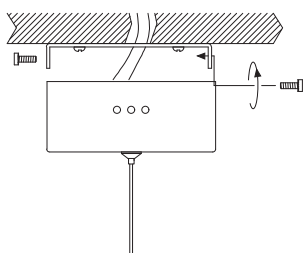


Apply the side screws

5

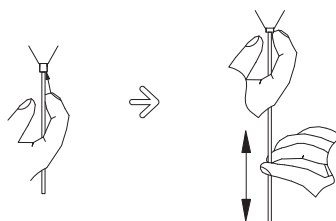

Adjust the wire

6

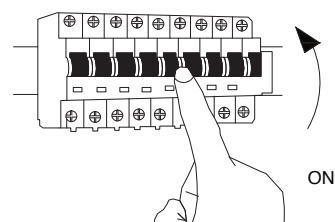

Turn on the general switch

