


NOVA LUCE

9333074




1

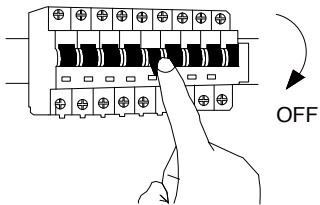


Turn off the general switch

2

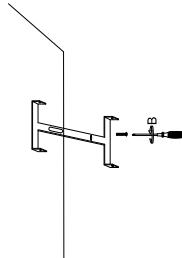


Mark areas & drill holes

3

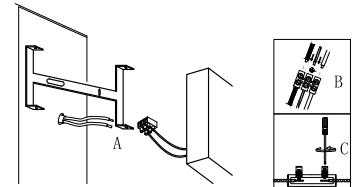


Apply plastic anchors

4

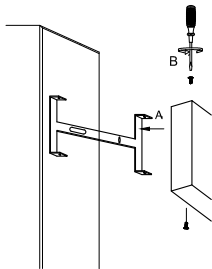

Apply screws

5

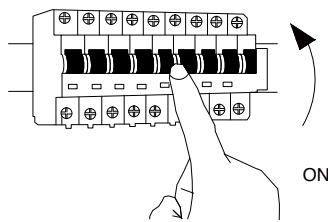

Connect the wires & apply
Side screws

