


# NOVA LUCE


9001534

1

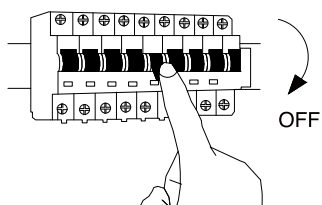


Turn off the general switch

2

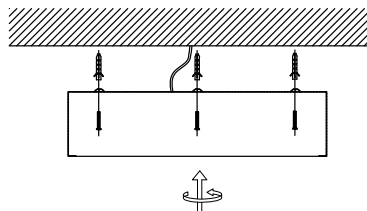


Drill holes & apply plastic anchors  
With screws

3

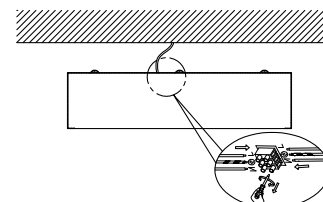


Connect wires

4

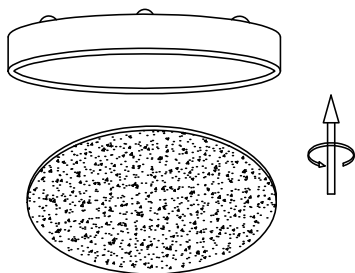

Apply the element

5

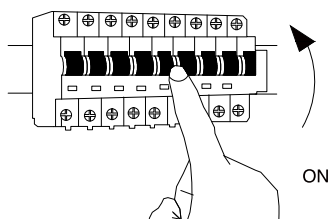

Turn on the general switch

