



# NOVA LUCE


9030510

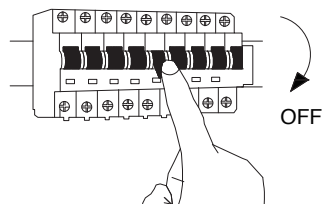


1. Turn off the general switch

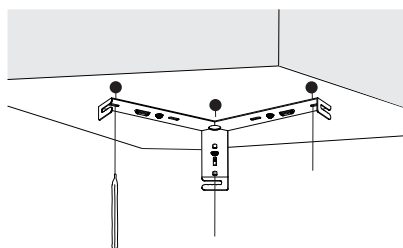


2. Align & mark

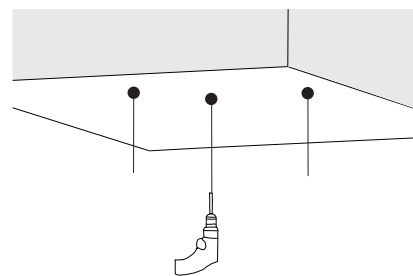


3. Drill holes on the marked areas

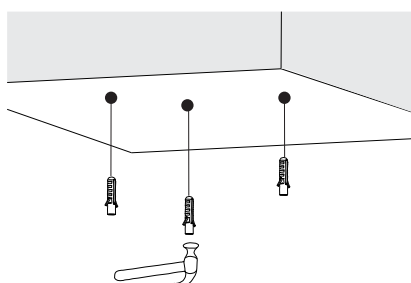



4. Apply plastic anchors

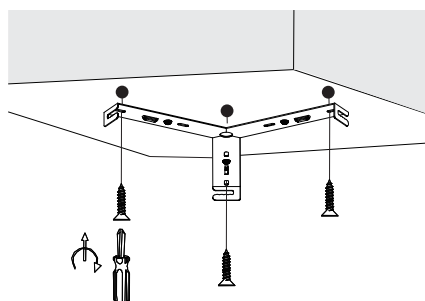

5. Apply the screws

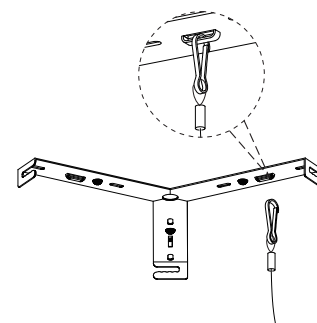


6. Place the element into place

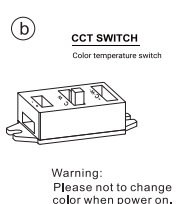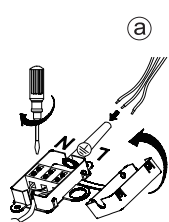


Warning:  
Please not to change  
color when power on.

7. Connect the wires

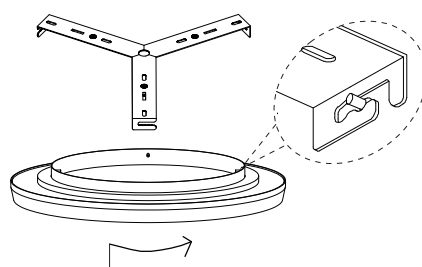

8. Fix the product in to place

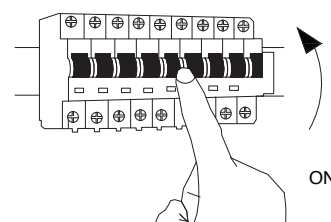

9. Turn on the general switch

