


NOVA LUCE


9223111 9223112

1

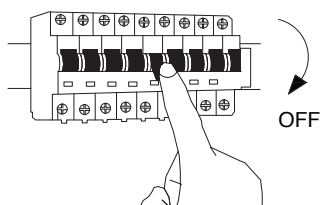


Turn off the general switch

2

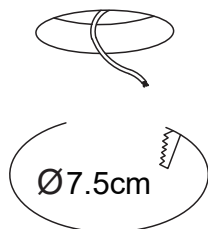


Create a cutout

3

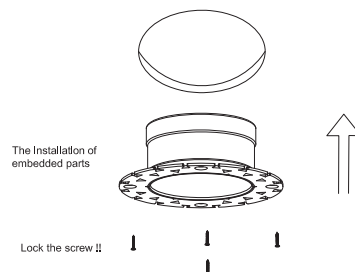


Apply the screws

4

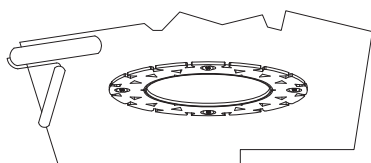


Smear lime

5

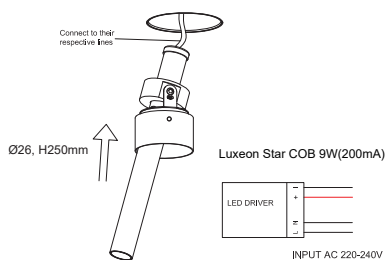


Connect wires
& Apply it In place

6

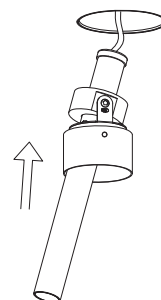

Apply the product in to place

7

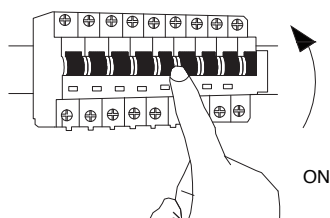

Turn on the general switch

