


NOVA LUCE


9018061, 9018062

1

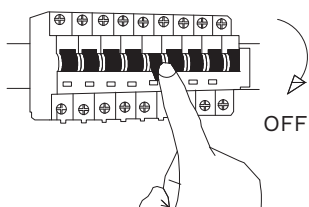


Turn off the general switch

2

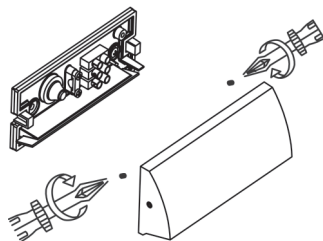


Untight the side screws

3

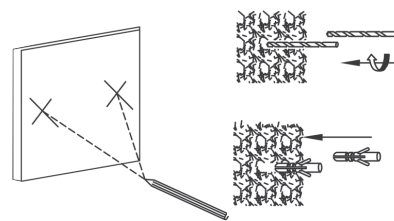


Drill on the marked areas & Apply plastic anchors & apply the screws

4

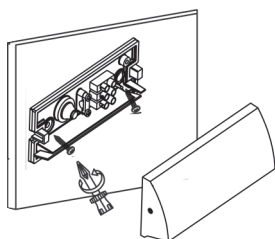


Apply the screws

5

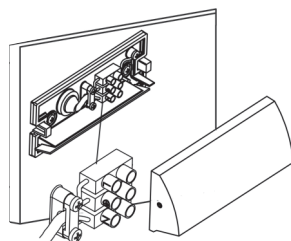


Connect the wires

6

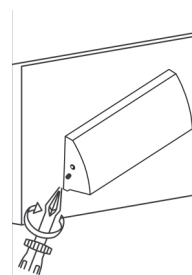

Tight the side screws

7

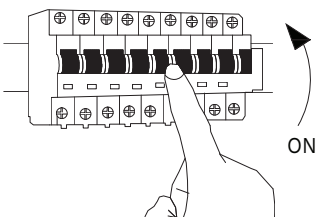

Turn on the general switch

