

# NOVA LUCE


9124120

1




Turn off the general switch

2

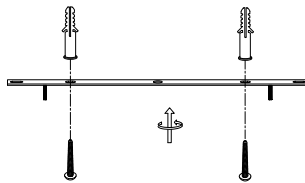


Drill holes & apply plastic anchors  
With screws

3

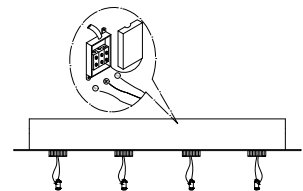


Connect the wires

4

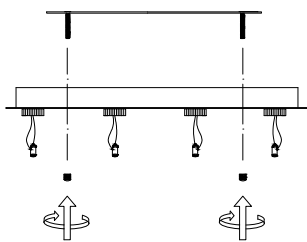


Apply the bottom caps

5

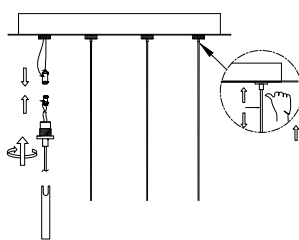

Put it in place  
& Adjust the wire

6

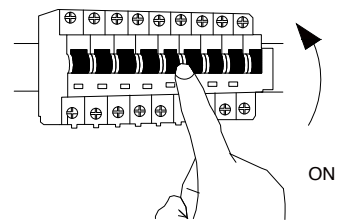

Turn on the general switch

