


# NOVA LUCE


9210313, 9210314

1

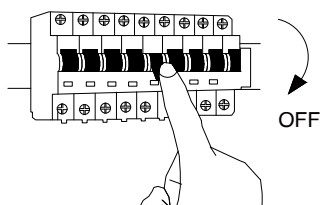


Turn off the general switch

2

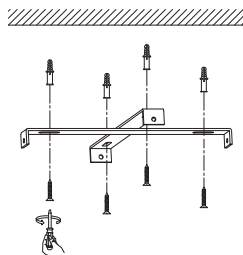


Align, mark and drill holes  
apply plastic anchors & tie up screws

3

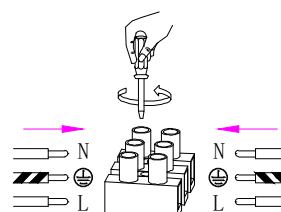

Connect the wires

4

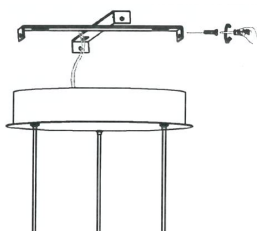


Apply side screws  
to make it stable

5



Apply the canopy by rotating

6

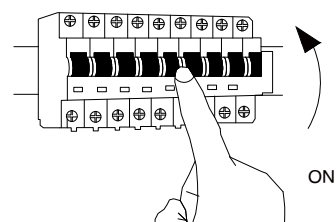

Turn on the general switch

