

NOVA LUCE


9001491 - 9001492

1




Turn off the general switch

2

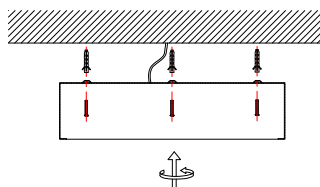


Drill holes, Apply plastic anchors
& screws

3

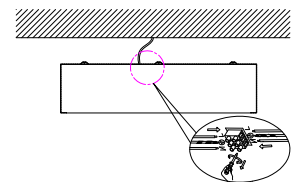


Connect the wires

4

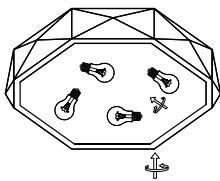


By rotating apply the bulbs

5

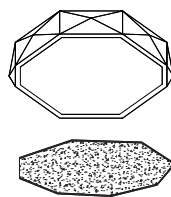

Apply the cap

6

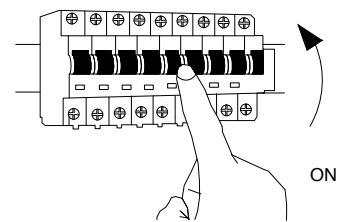

Turn on the general switch

