



NOVA LUCE


9695228

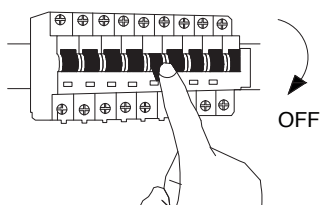


1 Turn off the general switch

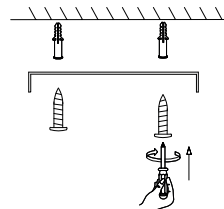


2 Align, Mark, Drill holes & Apply Plastic Anchors With Screws

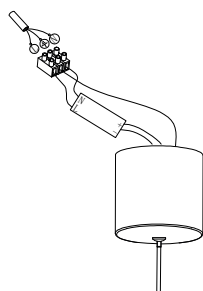

3 Connect Wires

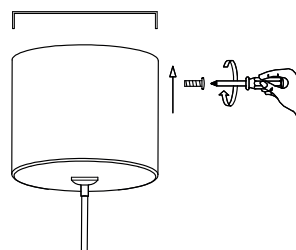

4 Apply Side Screws

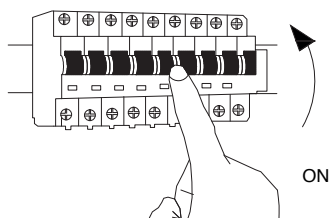

5 Turn on the general switch

