


# NOVA LUCE

9040100-9040101  
9040102-9040103


1

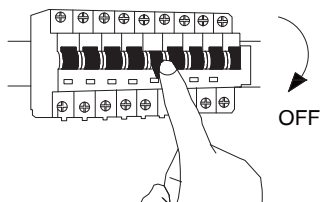

Turn off the general switch


2

Cut Size.  
Φ35mm

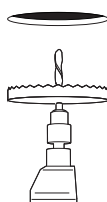


Create a CutOut

3

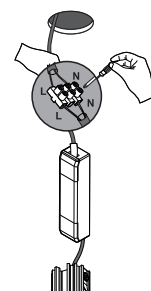


Connect wires

4

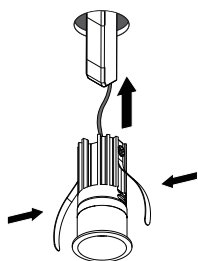

Press brackets &  
Insert it into the hole

5

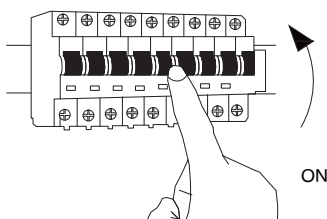

Turn on the general switch

6

