

# NOVA LUCE


9186810

1




Turn off the general switch

2

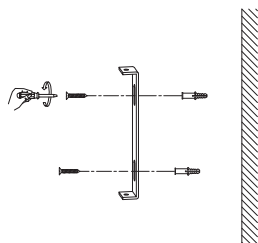


Drill holes & apply plastic anchors  
With screws

3

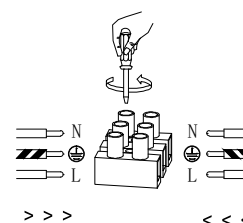


Connect the wires

4

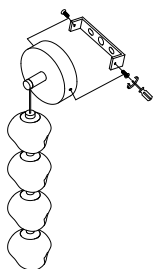

Put it in place & apply side screws

5

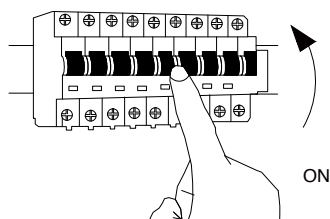

Turn on the general switch

