



NOVA LUCE


859438/859439/9297191

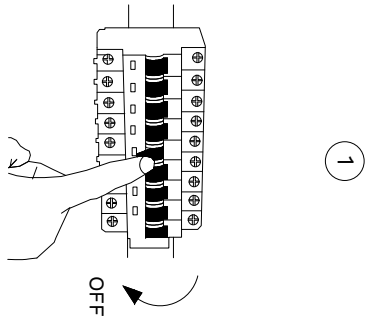


Turn off the general switch

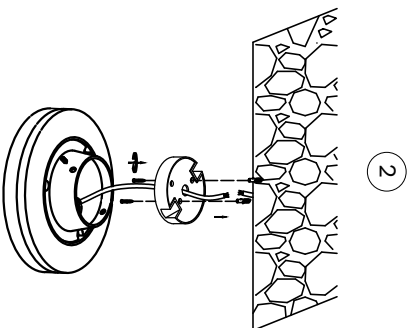


Create a CutOut
Mark, drill holes & apply plastic anchors

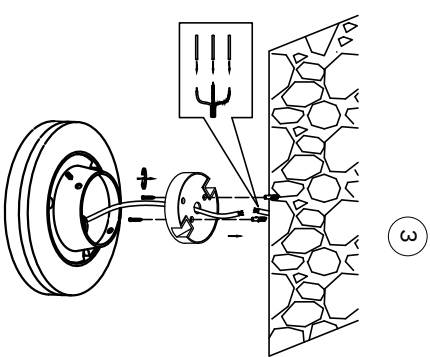

Connect wires

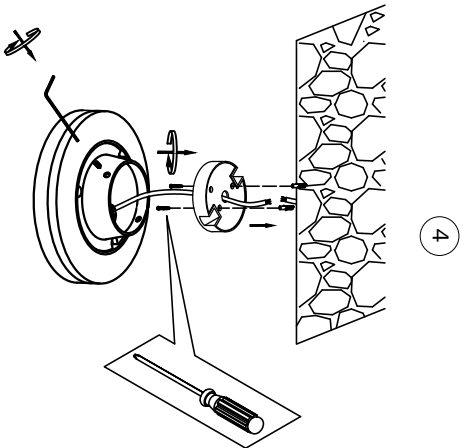

Fix it in place by tying up the screws

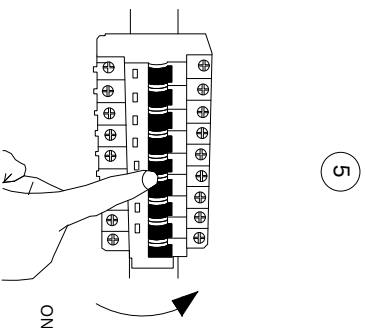

Turn on the general switch

