

# NOVA LUCE


9540235

1




Turn off the general switch

2

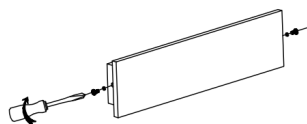


Untight the side screws

3

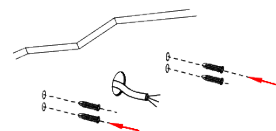


Drill holes & apply plastic anchors

4

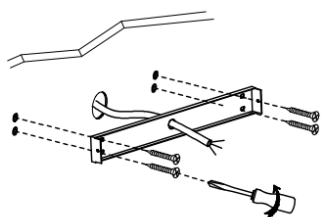


Apply screws

5

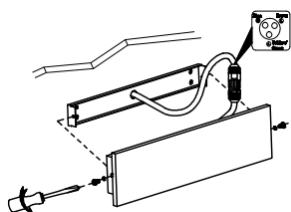

Connect wires &  
Apply the Side screws

6

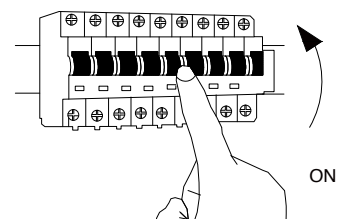

Turn on general switch

