


# NOVA LUCE


9002675

1

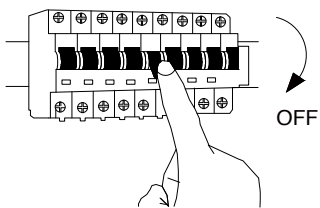


Turn off the general switch

2

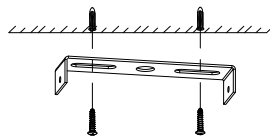


Drill holes & apply plastic anchors  
With screws

3

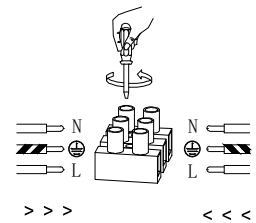


Connect the wires

4

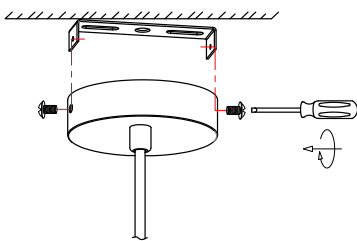


Apply the side screws

5

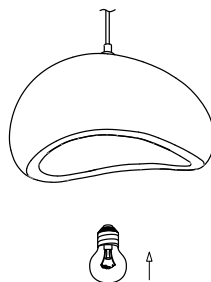

Apply the bulb

6

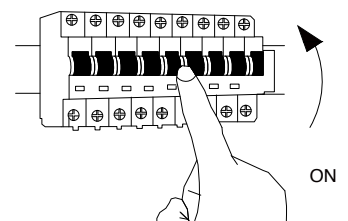

Turn on the general switch

