

# NOVA LUCE


702203

1




Turn off the general switch

2

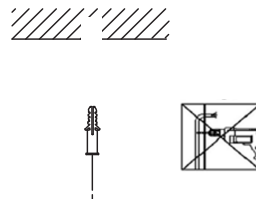


Drill holes & apply plastic anchors

3

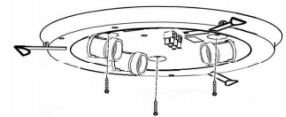


Apply screws

4

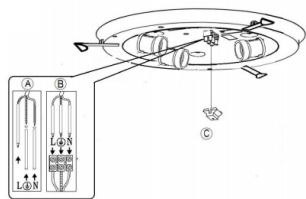


Connect the wires

5

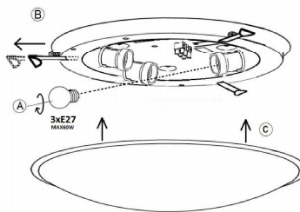

Insert the bulb & apply  
The top glass

6

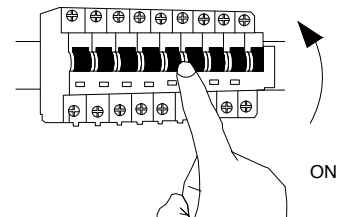

Turn on the general switch

