


NOVA LUCE


9232217 9232218

1

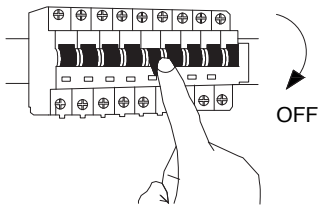


Turn off the general switch

2

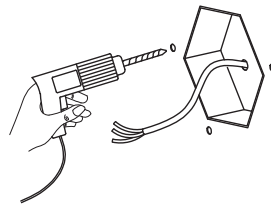


Drill holes

3

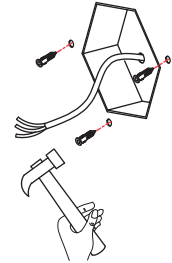


Apply plastic anchors

4

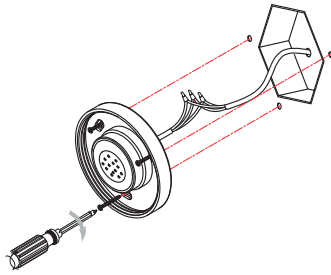


Put it in place & apply the screws

5

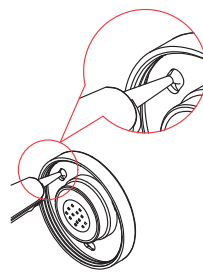


Apply the waterproof glue

6

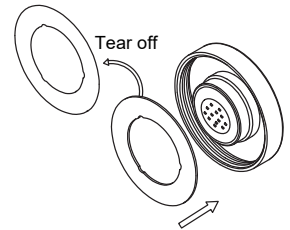


Tear off the surface, expose the Adhesive & apply it in the box

7

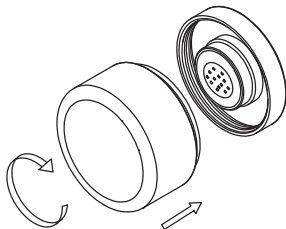


By rotating put it in place

8

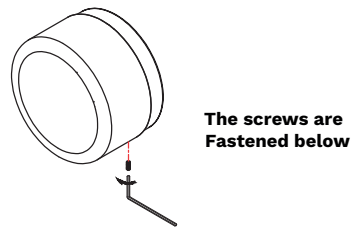

Apply the nut

9

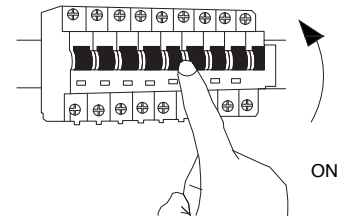

Turn on the general switch

