


# NOVA LUCE


9404073

1

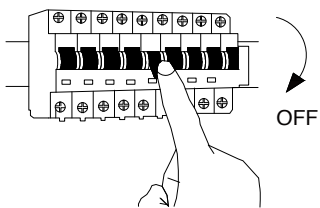


Turn off the general switch

2

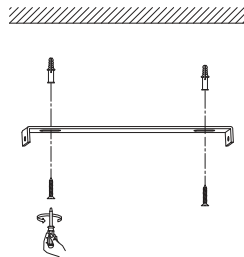


Drill holes Apply Plastic Anchors With Screws

3

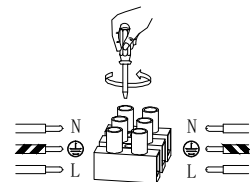


Connect The Wires

4




Insert the bulb

5

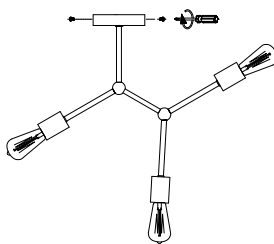

Apply the side screws

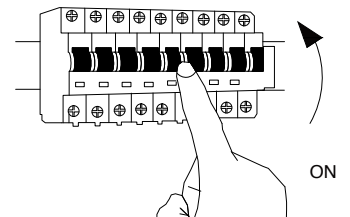

Turn on the general switch

