



NOVA LUCE


9030506

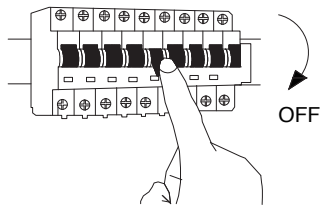


1. Turn off the general switch

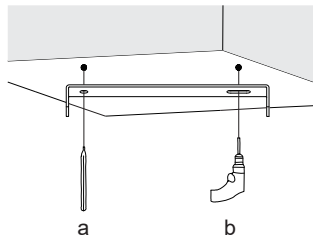


2. Align, mark & drill

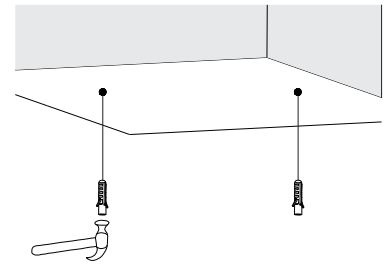


3. Apply plastic anchors

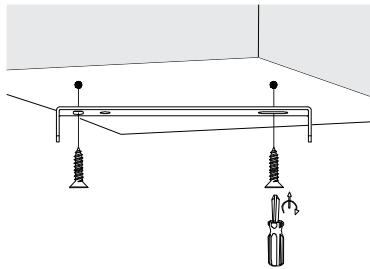


4. Apply Screws

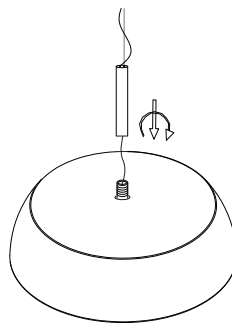


5. By rotating apply the top cap

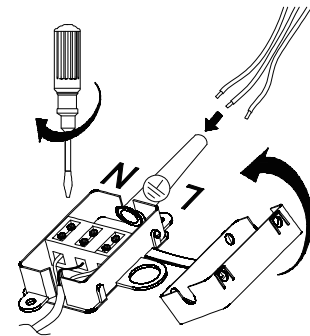


6. Connect the wires

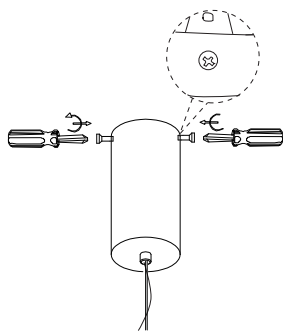

7. Apply the side screws

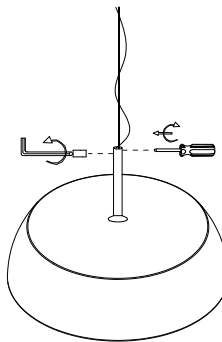

8. Fix the side screw in to place

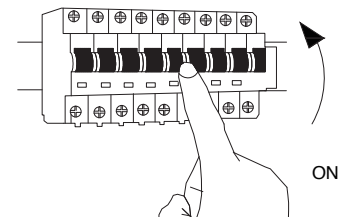

9. Turn on the general switch

