


NOVA LUCE


9043315

1

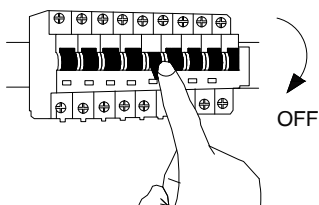


Turn off the general switch

2

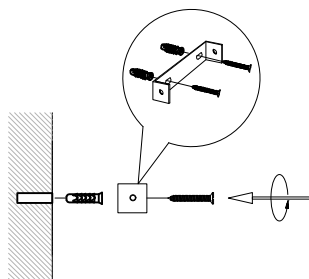


Mark where to drill holes
Apply plastic anchors & tie up screws

3

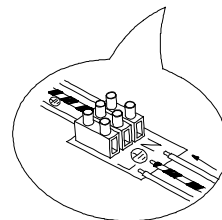


Connect wires

4

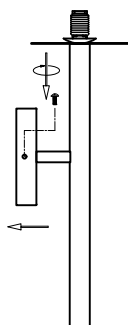


Tie up side screws

5



Insert the bulb by rotate
& tie up the cap into place

6

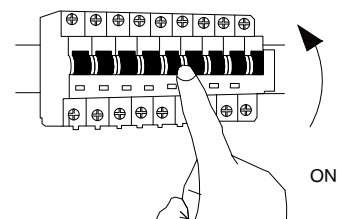

Turn on the general switch

