


NOVA LUCE

9285410


 x2  x2

1

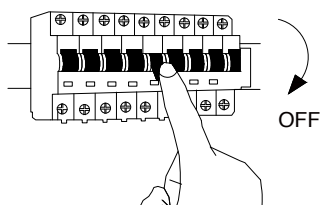


Turn off the general switch

2

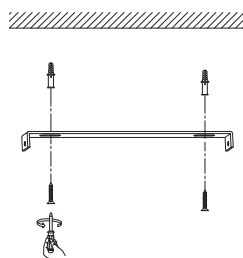


Drill holes apply plastic anchors
With screws

3

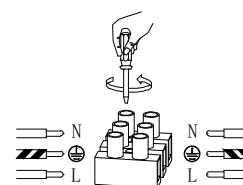


Connect the wires

4

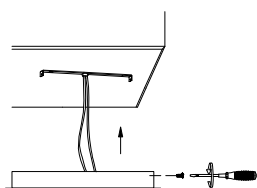

Apply the side screws

5

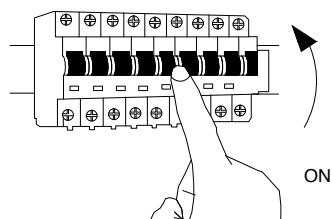

Turn on the general switch

