


# NOVA LUCE


9070633

1

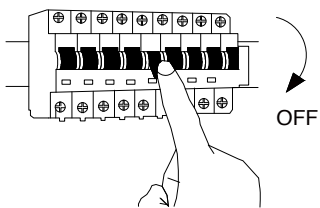


Turn off the general switch

2

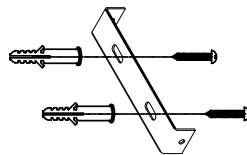


Drill holes & apply plastic anchors  
With screws

3

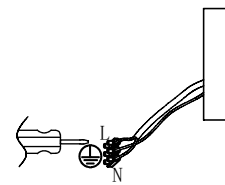


Connect the wires

4

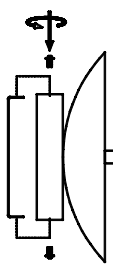


Apply the side screws

5

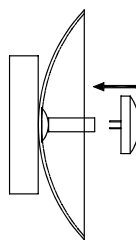

Plug it in

6

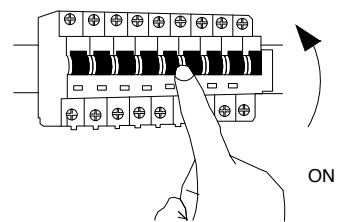

Turn on the general switch

