


# NOVA LUCE


9060309 9060310  
9060311 9060312  
9060313 9060314  
9060315 9060316

1

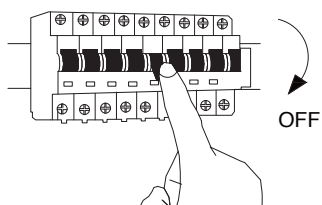


Turn off the general switch

2

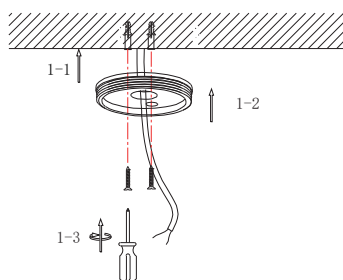


Drill holes, apply plastic anchors  
With screws

3

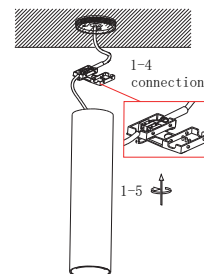

Connect the wires and rotate the  
object to put in place

4

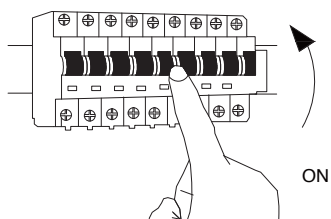

Turn on the general switch

