


# NOVA LUCE


9060218

1

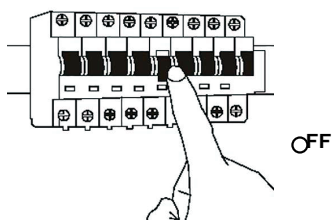


Turn off the general switch

2

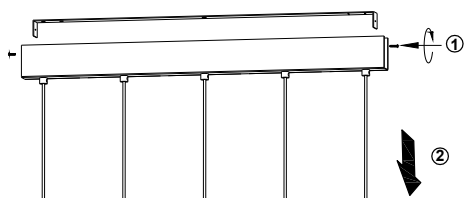


Break it apart

3

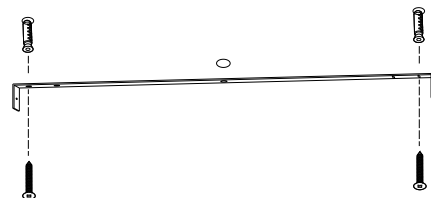


Align, mark and drill holes to apply the screws

4

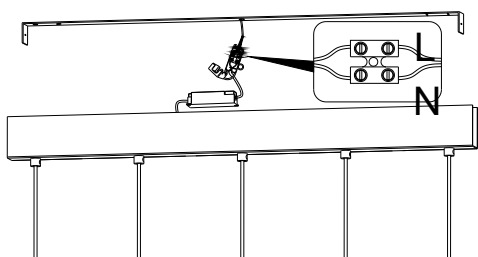


Connect the 2 wires

5

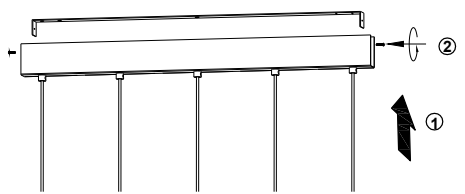

Fix the canopy on the ceiling

6

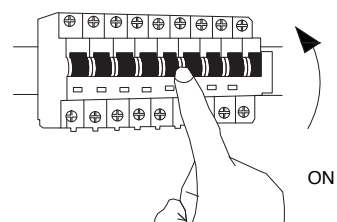

Turn on the general switch

