


NOVA LUCE


870045

1

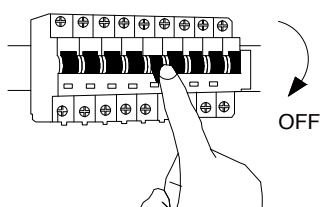


Turn off the general switch

2

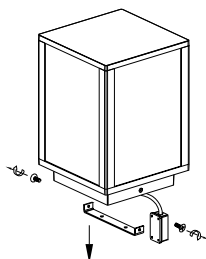


Dismantle the product

3

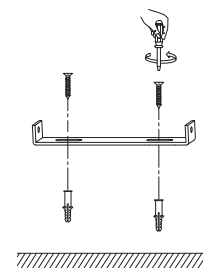


Drill holes & apply plastic anchors
With screws

4

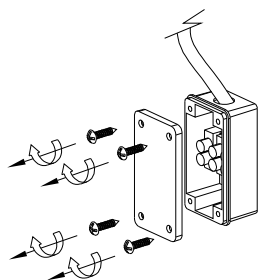


Remove the screws

5

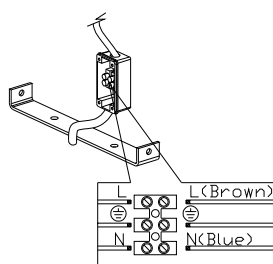


Connect the wires

6

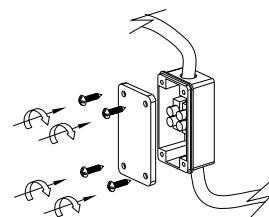


Apply the screws

7

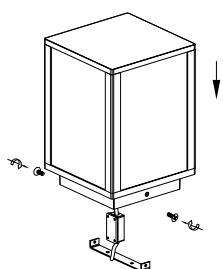

Put in place & apply
The side screws

8

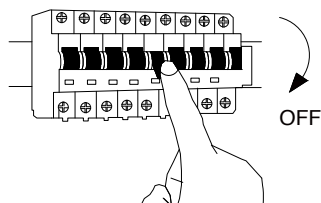

Turn off the general switch

