



# NOVA LUCE

9058119 9058120 90581121 9058122

## Hanging Installation

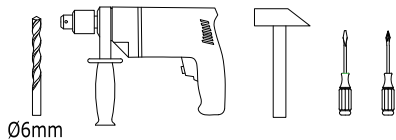


Ø6mm

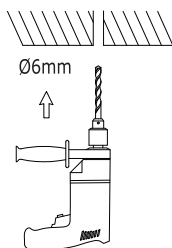


Drill holes

①

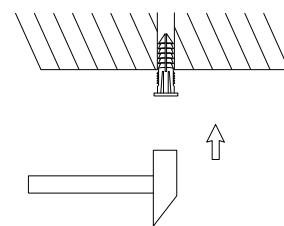


Apply plastic anchors

②

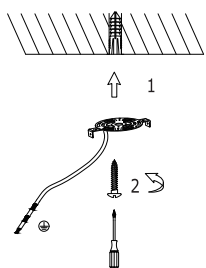


Tie up screws

③

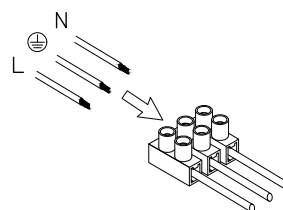


Connect wires

④

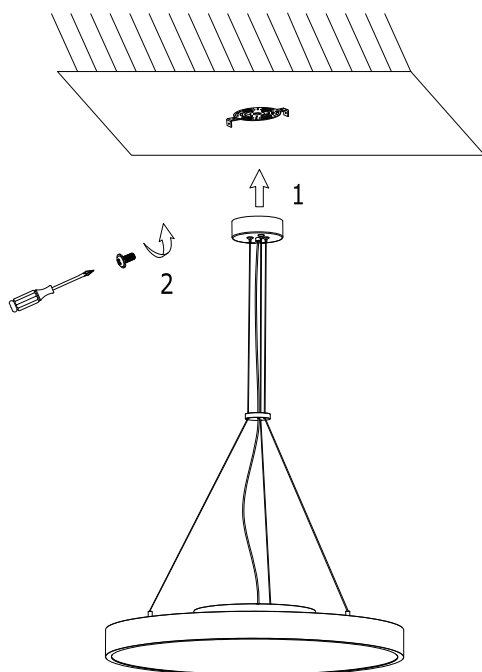

Put it in place  
& tie up side screws

⑤

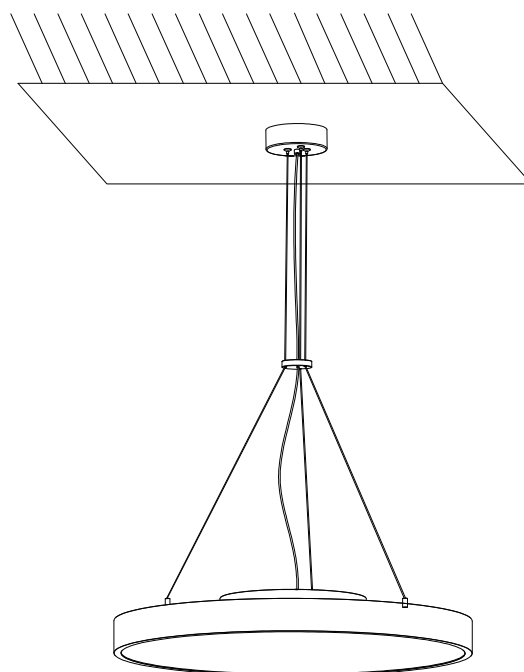

Installation complete

⑥

