


# NOVA LUCE


9695104

1

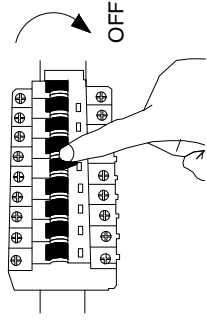


Turn off the general switch

2

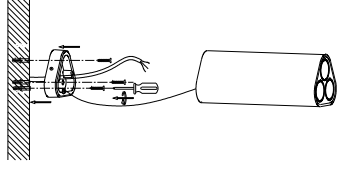


Drill holes, apply plastic anchors with screws

3

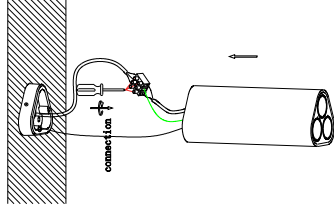

Connect the wires & put it in place

4

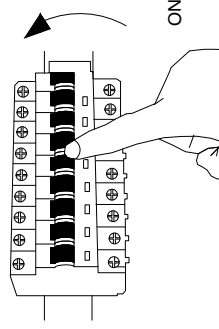

Turn on the general switch

