


# NOVA LUCE


9019783

1

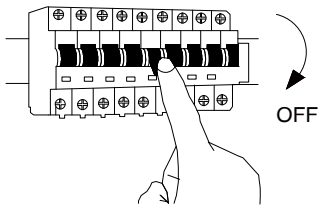


Turn off the general switch

2

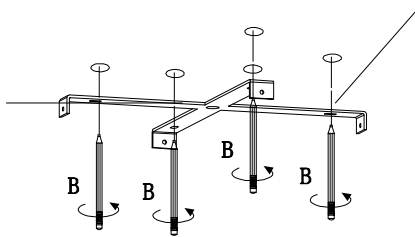


Mark & drill holes

3

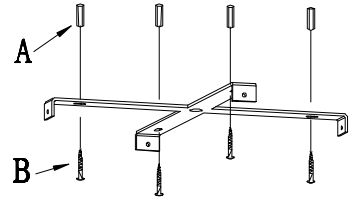


Apply plastic anchors with screws

4

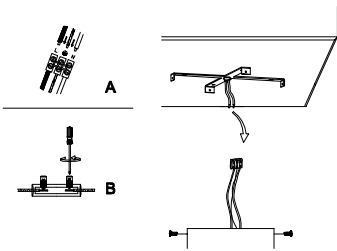


Connect wires

5

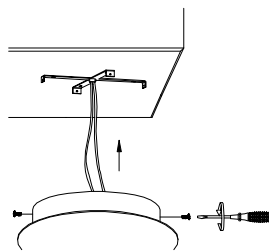


Apply the side screws

6

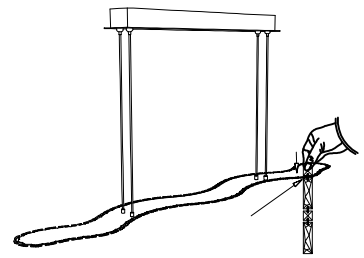

Align the crystal with the notch on the lamp body and insert it

7

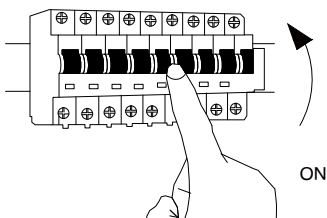

Turn on the general switch

