


NOVA LUCE


9620154

1

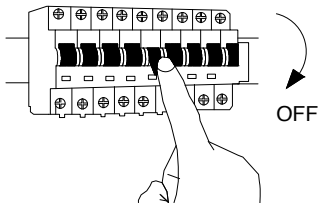


Turn off the general switch

2

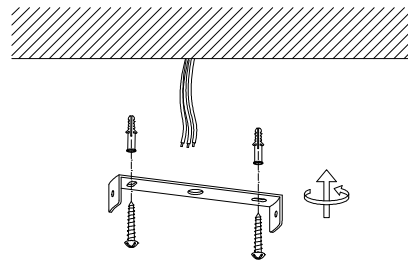


Drill holes
& Apply plastic anchors with screws

3

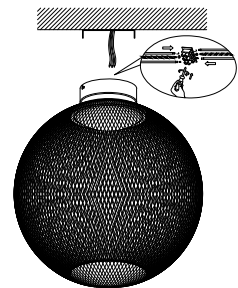


Connect the wires

4

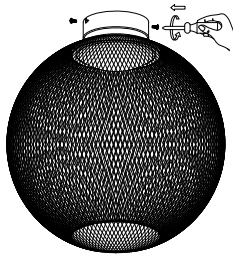

Apply the side screws

5

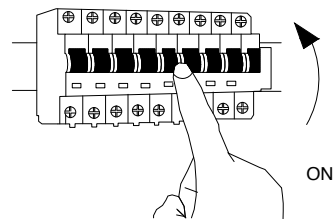

Turn on the general switch

