


NOVA LUCE

9624066
9624076
9624098

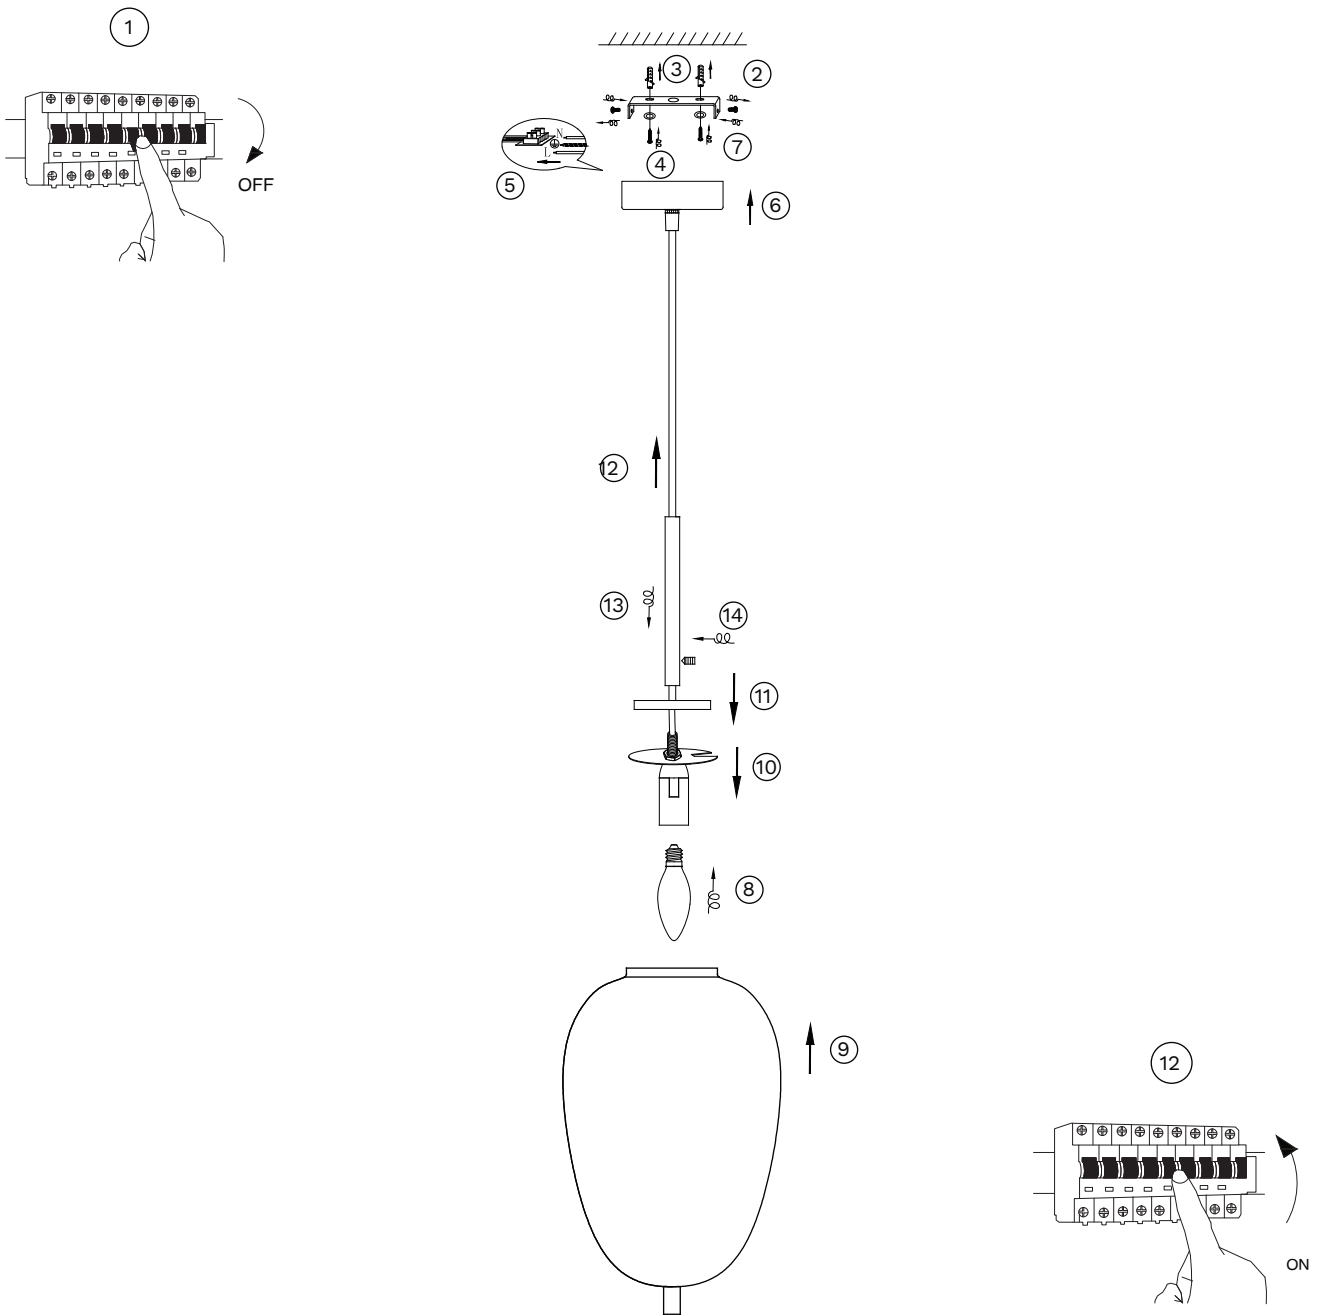

1. Turn off the general switch
2. Drill holes
3. Apply plastic anchors
4. Apply screws
5. Connect wires
6. Put the canopy in place
7. Apply the side screws
8. By rotating put the bulb in place
9. Carefully apply the acrylic
10. Put the socket in place
11. Put the socket in place
12. By rotating place the pendant
13. By rotating place the pendant
14. Apply the side pendant screw
15. Turn on general switch

