


# NOVA LUCE


9232151

1

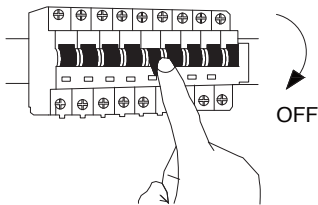


Turn off the general switch

2

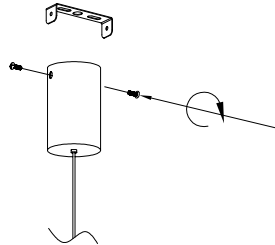


Unscrew the side screws from the rosette and take out the bracket.

3

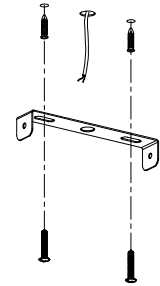


Apply plastic anchors & Apply the screws

4

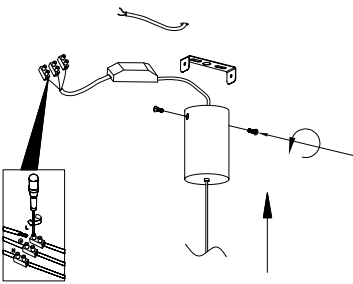


Connect the 3 wires. Place the bracket and apply the side screws.

5



Adjust to your preferred height.

6

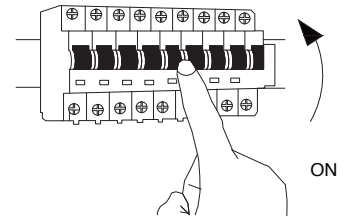

Turn on the general switch

