


# NOVA LUCE


9009122

1

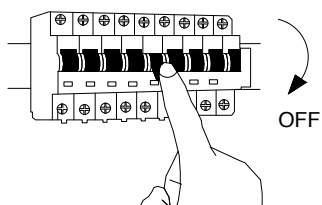


Turn off the general switch

2

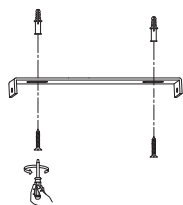


Drill holes & apply plastic anchors  
With screws

3

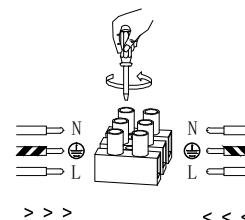


Connect the wires

4

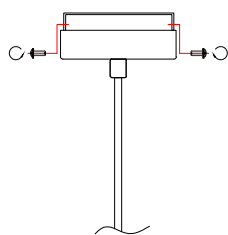


Apply the side screws

5

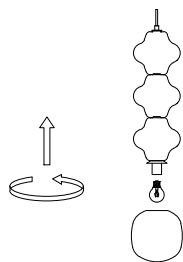

By rotating  
Apply the glass into place

6

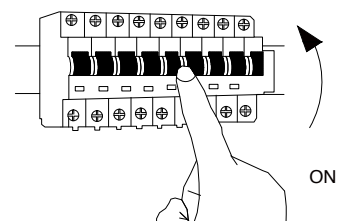

Turn on the general switch

