


NOVA LUCE


9601001

1

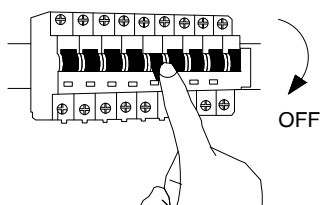


Turn off the general switch

2

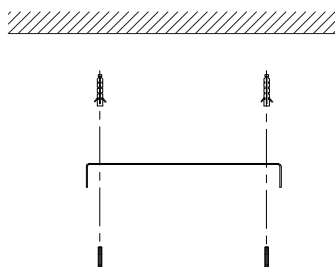


Align, mark and drill holes
apply plastic anchors & tie up screws

3

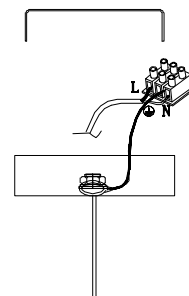


Connect the wires

4

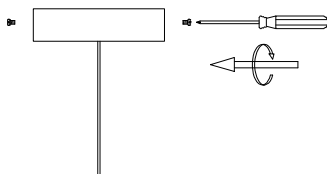

Apply the side screws
To make it stable

5

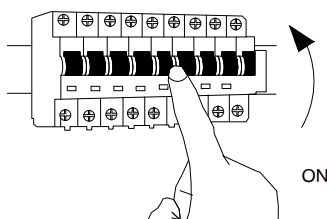

Turn on the general switch

6

