


NOVA LUCE


9087881, 9087882

1

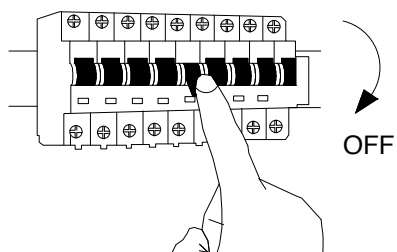


Turn off the general switch

2

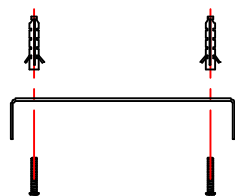


Align, mark and drill holes
apply plastic anchors & tie up screws

3

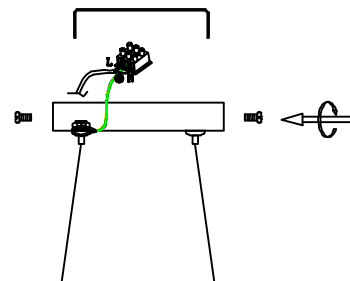


Connect the wires
& apply side screws to make it stable

4

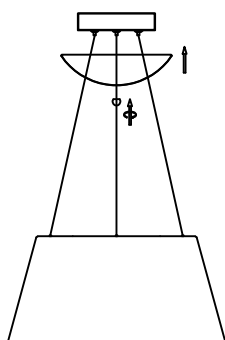

Fix it in place

5

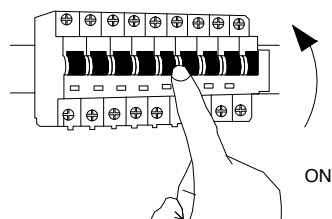

Turn on the general switch

