


# NOVA LUCE


9232153

1

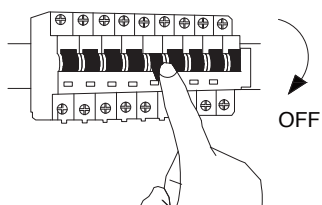


Turn off the general switch

2

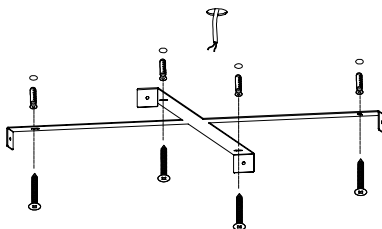


Drill holes apply plastic anchors with screws.

3

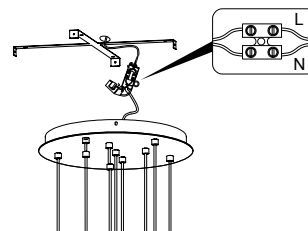


Connect the 3 wires

4

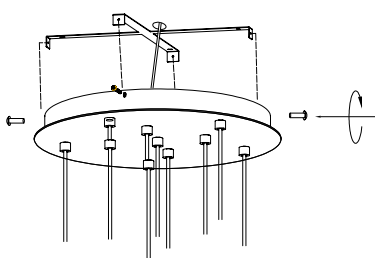


Place the brackets and apply the side screws.

5

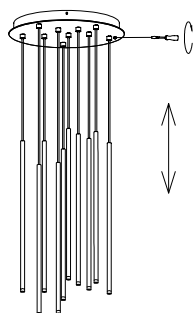

Adjust to your preferred height.

6

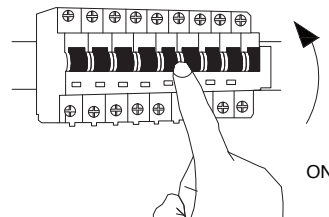

Turn on the general switch

