


# NOVA LUCE


9214212 9214213

1

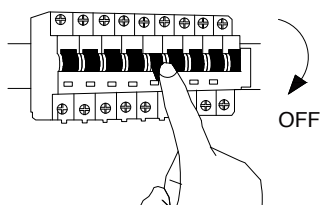


Turn off the general switch

2

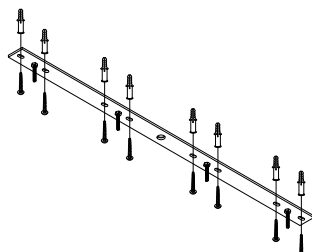


Drill holes & apply plastic anchors  
With screws

3

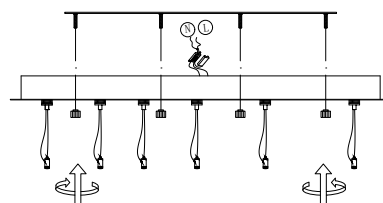


Connect the wires

4

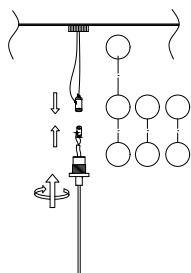

Apply the element in to place

5

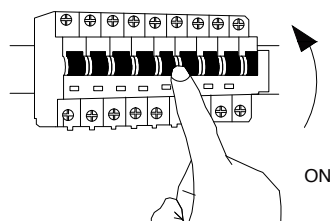

Turn on the general switch

