


# NOVA LUCE


9130506, 9130512

1

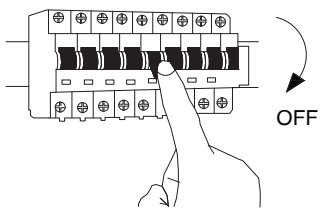


Turn off the general switch

2

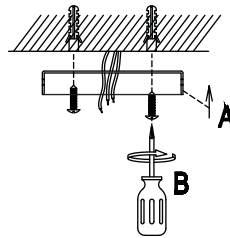


Drill holes, apply plastic anchors  
& Apply screws with a screw driver

3

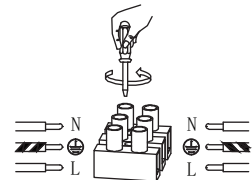


Connect the wires

4

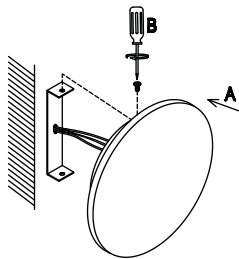

Apply the top & the bottom screws

5

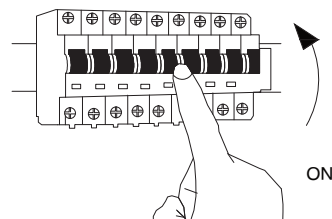

Turn on the general switch

