

# NOVA LUCE


9001101

1




Turn off the general switch

2

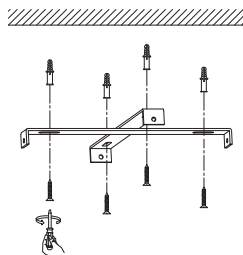


Mark, drill holes & apply  
Plastic anchors with screws

3

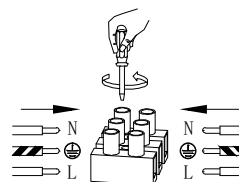


Connect the wires

4

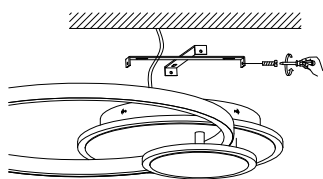

Apply the Side screws

5

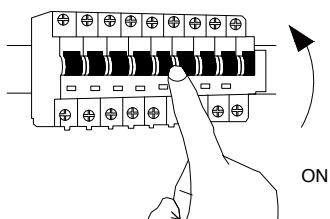

Turn on the general switch

