


NOVA LUCE


9333090

①

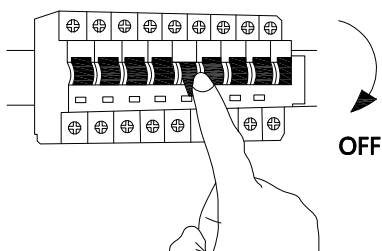


Turn off the general Switch

②

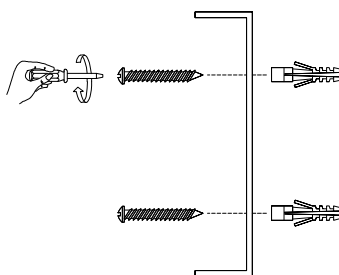


Drill holes & apply plastic anchors
With screws

③

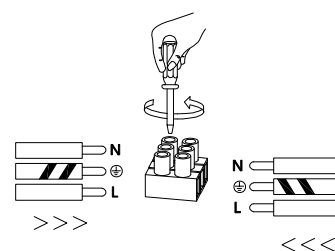


Connect the wires

④

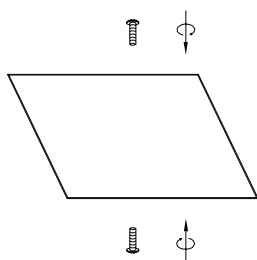


Apply the side screws

⑤



Install crystal lights

⑥

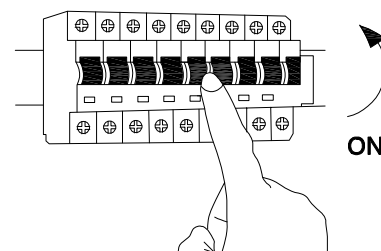

Turn on the general switch

