


# NOVA LUCE


9081828

1

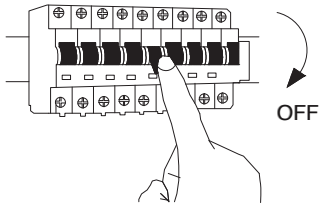


Turn off the general switch

2

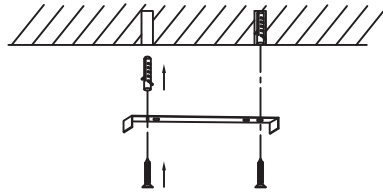


Align, mark & drill holes  
Tie up the screws

3

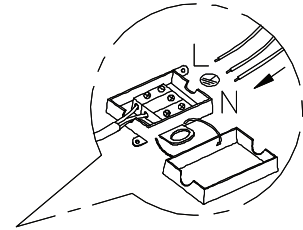


Connect wires

4

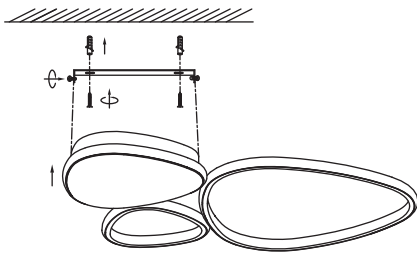

Apply side screws

5

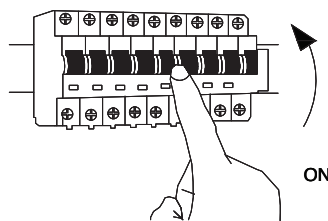

Turn on the general switch

