

NOVA LUCE


9695200

1




Turn off the general switch

2

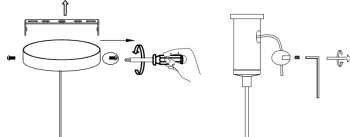


Dismantle the product

3

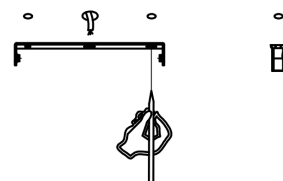


Mark where to drill

4

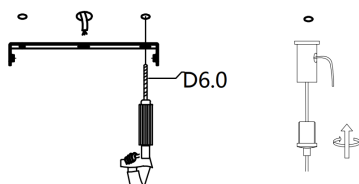


Drill holes

5

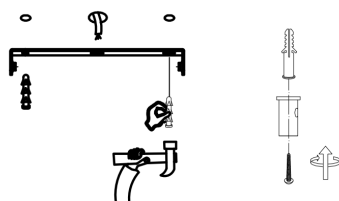


Apply plastic anchors

6

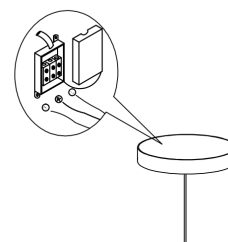

Connect the wires

7

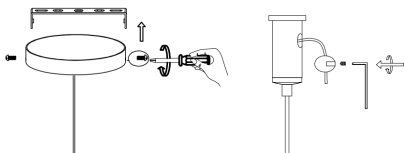


Apply side screws

8



Put it in place

8

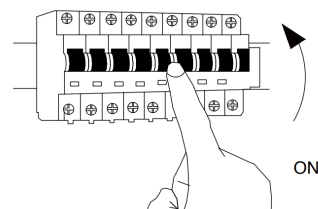

Turn on general switch

