



# NOVA LUCE


9088113

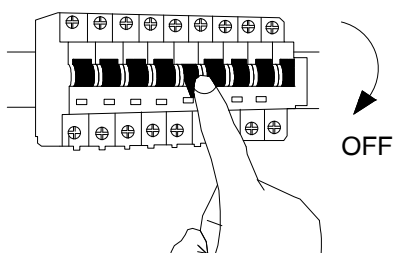


1. Turn off the general Switch

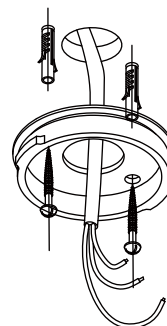


2. Align, mark and drill holes to apply the screws

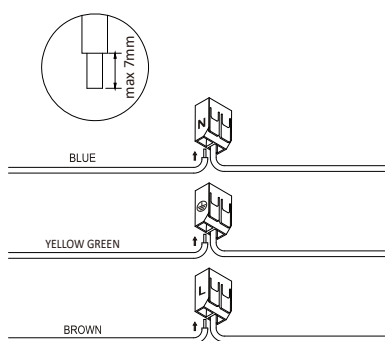

3. Connect the 3 wires

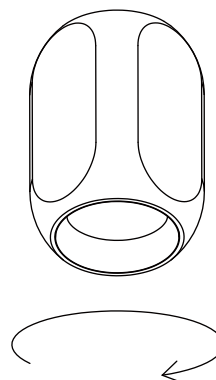

4. Apply the cap by rotating it onto the base

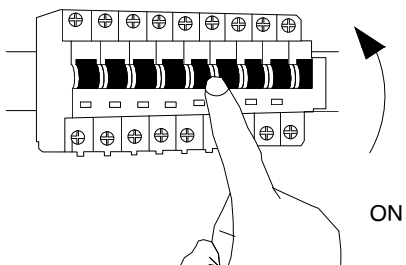

5. Turn on the general Switch

