



# NOVA LUCE


9453430, 9453434, 9453452, 9453453  
9453454, 9453455, 9453456

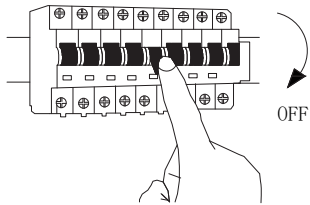


1. Turn off the general switch

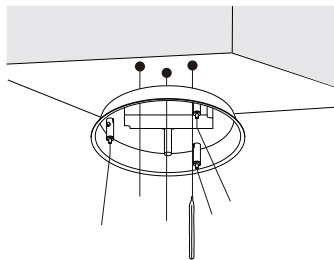


2. Mark where to drill holes

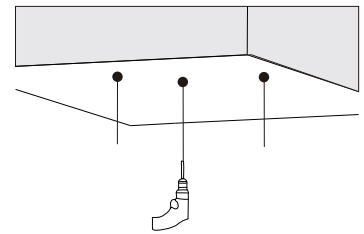


3. Drill on the marked areas

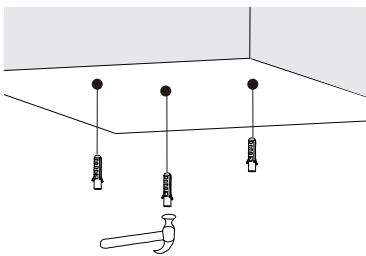


4. Apply plastic anchors

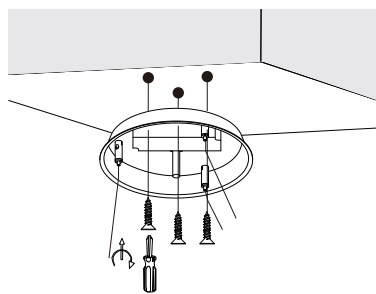


5. Apply screws

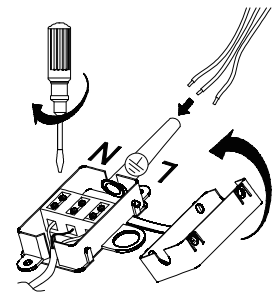


6. Connect the wires

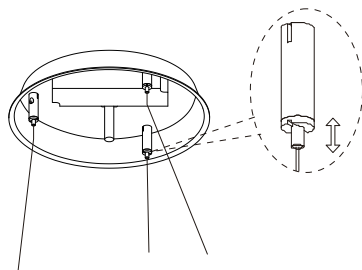

7. Adjust the product

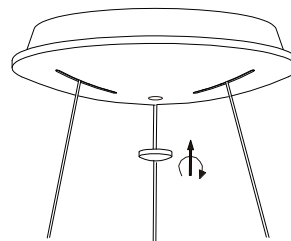

8. By rotating apply the cap

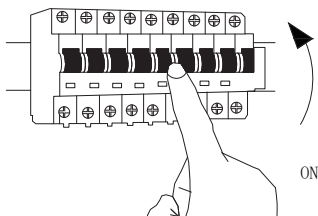

9. Turn on the general switch

