


NOVA LUCE


9756716

1

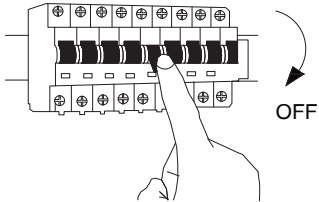


Turn off the general switch

2

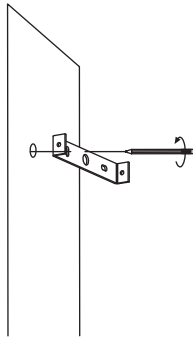


Mark where to drill holes

3

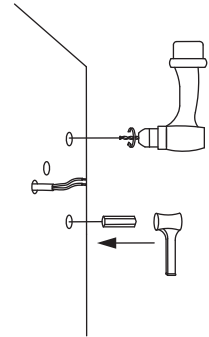


Make holes & apply anchors

4

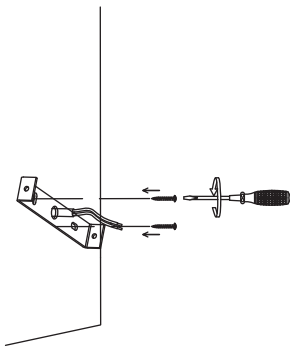


Tie up the screws to make it stable

5

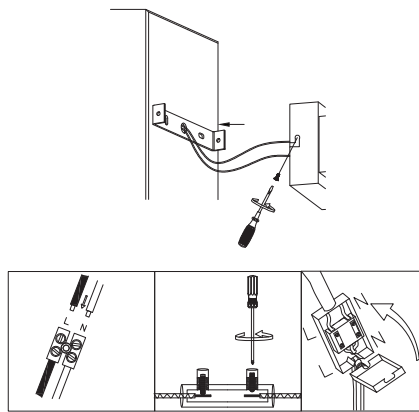


Connect the wires

6

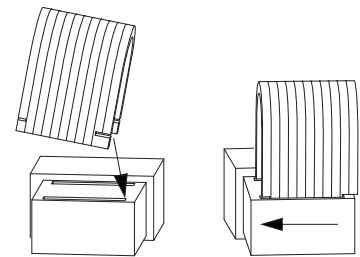

Insert the luminaire into place by placing it into place & sliding it in

7

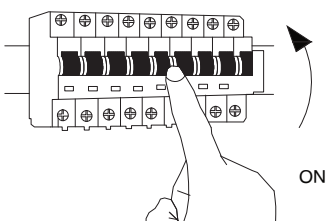

Turn on the general switch

8

